4-Key Glass Panel RF Remote Controller

Model No.: PF1(G), PF1-2(G), PF2(G), PF3(G)

4-key glass panel/1-4 color/Wireless remote 30m distance/CR2032 battery







PF1(G) 1 Zone Dimming

PF1-2(G) 2 Zone Dimming

PF2(G) 1 Zone CCT

¢

**

PF3(G) 1 Zone RGB/RGBW

CE RoHS emc LVD RED

Features

- Apply to single color, dual color or RGB/RGBW LED controller.
- Each remote can match one or more receiver.
- CR2032 battery powered.

 
Technical Parameters

 
Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	< 5mA
Standby current	< 2µA
Standby time	2 years
Remote distance	30m(Barrier-free space)
Warranty	
Warranty	5 years

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,IVD,RED

Environment	
Operation temperature	Ta: -30°C ~ +55°C
IP rating	IP20

Mechanical Structures and Installations





Replace battery:



Note: Before the first use, please remove the protective film on the battery.



Typical base as below:



European style

86 size

Installation diagram:





panel border







Uninstall

Baseplate

Base

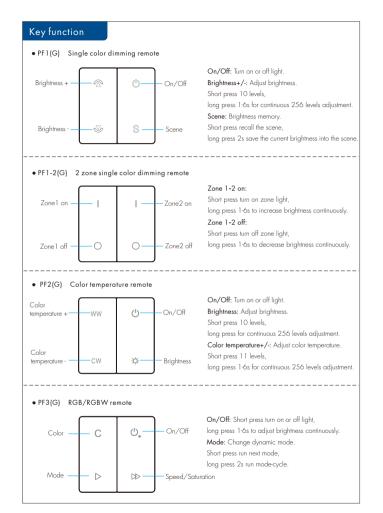

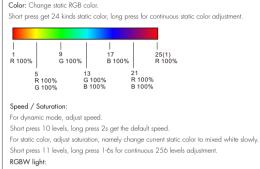

long press Mode + Speed/Saturation key to adjust W channel brightness simultaneously.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key on the remote. The LED indicator fast flash a few times means match is successful

Delete• Press and hold match key for 5s to delete all match. The IED indicator fast flash a few times means all matched remotes were deleted

Safety information

- 1. Read all instructions carefully before you begin this installation.
- 2. When installing battery, pay attention to the battery positive and negative polarity.

A long time without the remote control, remove the battery.

When remote distance becomes smaller and insensitive, replace the battery.

- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

Delete: Switch off the power, then switch on power, repeat again, Immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were

The light blinks 3 times means match is successful.

Use Power Restart

Match:

deleted

Switch off the power, then switch on power, repeat again.

Immediately short press on/off key 3 times on the remote.