Dual Color LED Controller Kit

Model No.: V2 + R12

2 channels constant voltage/Touch color slide/Stepless dimming/Wireless remote 30m distance



F© C C€ RoHS @mc LVD RED

Features

- Ultra sensitive color adjustment touch slide
- · Smooth dimming and switch without any flickering
- Auto-transmitting function: Controller automaticly transmit signal to another controller with 30m control distance
- Synchronize on multiple number of controllers
- Light on/off fade time 3s selectable
- Magnet on the back which can be easily stuck on back holder or any metal surfaces

Technical Parameters

LED Receiver's Input and Output		
12-24VDC		
10.5A		
2x(12-24)VDC		
2CH,5A/CH		
2x(60-120)W		
Constant voltage		

Dimming data	
Dimming level	4096 levels
Dimming range	0 - 100%
Dimming curve	Linear
PWM Frequency	2000Hz


Warranty and Protection	
Warranty	5 years
Protection	Reverse Polarity

LED Remote's Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	<5mA
Standby current	< 10µA
Standby time	1 year
Remote distance	30m


ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
EN 62368-1:2020+A11:2020
ETSI EN 300 328 V2.2.2
CE,EMC,LVD,RED

Environment	
Operation temperature	Ta:-30°C ~ +55°C
Case temperature (Max.)	Tc:+85°C
IP rating	IP20

Mechanical Structures and Installations

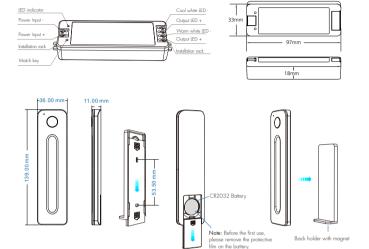


Wiring Diagram

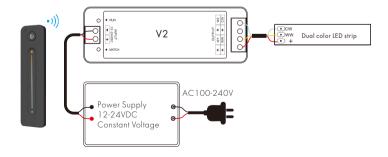

User Manual Ver 1.0.3

Key function V2+R12 Dual Color LED Controller Kit

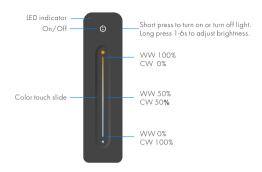

- * To extend battery life, no operation after 20 seconds, the touch slide will enter sleep state.
- * If the light is on, long press on/off key exceed 1 second, then touch slide to dimming.
- * If the light is off, short press on/off key to turn on light, then touch slide to dimming.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key of the remote.

Delete:

Press and hold match key for 5s to delete all match, The light blinks 5 times means all matched remotes were deleted

Use Power Restart

Match:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were

Light on/off fade time

Long press match key 5s, then short press match key 3 times, the light on/off time will be set to 3s, the indicator light blink 3 times. Long press match key 10s, restore factory default parameter, the light on/off time also restore to 0.5s.

Application notes

All the receivers are matched with one RF remote.



RF remote

Auto-transmitting: One receiver can transmit the signals from the remote to another receiver within 30m, as long as there is a receiver within 30m, the remote control distance can be extended.

Auto-synchronization: Multiple receivers within 30m distance can work synchronously when they are controlled by the same remote

Réceiver placement may offer up to 30m communication distance. However, we recommend for indoor applications that receiver placements should be no further apart than 15m.

Dual color control

CH1=Warm white LED

CH2=Cool white LED


Each channel can supply up to 120W(@24V) and white balance can be controlled as such:

Color temperature	Cool white	Neutral white	Warm white	ı
Power distribution	CH1=0W,CH2=120W	CH1=60W,CH2=60W	CH1=120W,CH2=0W	ı

Linear dual color tuning

Warm whitel/Min. 2700KJ Neutral whitel/400KJ Cool whitel/Max. 6500KJ Recommended CCT range

Dimming curve



Malfunctions Analysis & Troubleshooting

Malfunctions	Causes	Troubleshooting
No light	No power. Wrong connection or insecure.	Check the power. Check the connection.
Uneven intensity between front and rear, with voltage drop	Output cable is too long. Wire diameter is too small. Overload beyond power supply capability. Overload beyond controller capability.	Reduce cable or loop supply. Change wider wire. Replace higher power supply. Add power repeater.
No response from the remote	The battery has no power. Beyond controllable distance. The controller did not match the remote.	Replace battery. Reduce remote distance. Rematch the remote.

User Manual Ver 1.0.3